



# Quick Start Guide

## Olympus WS-110 Digital Recorder

### Overview

---

The Olympus WS-110 digital recorder is designed for users to easily record high quality audio. The slim, light-weight design of the WS-110 is perfect for recording sound in a variety of places. With 256 MB of internal memory that allows for up to 69 hours of recording time, the WS-110 provides users with the capability of storing a vast amount of individual recordings.

### Getting Started

---



#### Turn Off

To turn off the device, simply slide the Hold switch back up into the on position. When the switch is back into this position, all button operations are disabled. This feature is useful if the recorder is carried in a handbag or pocket. If the recorder is stopped for 5 minutes or longer during recording or playing, it will go into Standby (power-save) mode, in which the display will shut off. To exit Standby mode and turn the display back on, press any button.

## How the Olympus WS-110 Is Organized


---

### Folders

The Olympus WS-110 is designed to allow for easy recording, organizing and navigation of previously recorded audio. The WS-110 comes equipped with 5 separate folders { [REDACTED] } in which recorded audio can be organized. Users can change the folder selection any time the device is not actively recording. Up to 200 messages can be recorded per folder. If "Folder FULL" or "Memory FULL" appears on the display, no more recording is possible. In such cases, erase unnecessary files or download to PC. To erase a single file, users must first press the Erase button and then the Play/Select button. To erase an entire folder, press the Erase button twice.

### LCD Screen

Navigating among the different recorded audio files and the other main features of the WS-110 is a simple process due to the device's LCD screen. This main screen provides users with the following information:

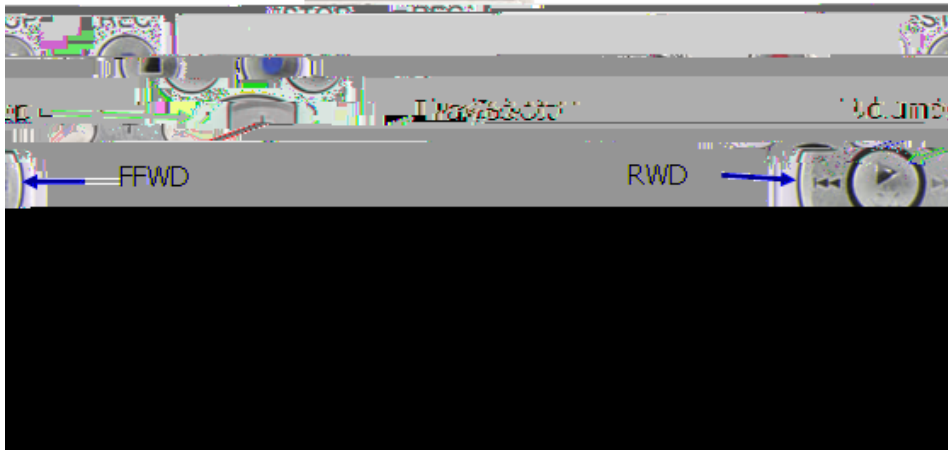

## How to Record and Playback Audio

---

### Recording Audio


To start recording, simply press the Rec. button. The record/play indicator light located at the top of the

## **Record Mode**

The recording mode can be chosen from HQ (high quality sound recording), SP (standard recording), and LP (long-term recording). The recording time available on the WS-110 will change according to which mode is chosen. While approximations of theseLP



2. Close the batter cover completely by pressing to the direction A then sliding to direction B.

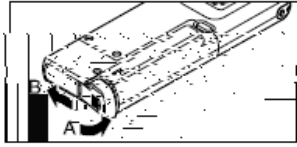

## Manufacturer Information

---

Olympus Imaging America Inc.  
3500 Corporate Parkway

PO Box 610  
Center Valley, PA 18034-0610  
Phone: 1-888-553-4448

Website [www.olympus.com](http://www.olympus.com)